

# Nissan Added Security Plan

# Benefit and Coverage Comparison by Vehicle Plan Type

	New Vehicle		Certified Pre-Owned		Pre-owned			
	Platinum	Gold	Platinum	Power Train	Platinum	Comprehensive	Power Train	Major Component
	<b>Benefits Coverage</b>							
<b>Premium Roadside Assistance Services</b>	Mechanical Breakdown Towing	■	■	■	■	■	■	■
	Emergency Transportation	■	■	■	■	■	■	■
	Trip Interruption Services	■	■	■	■	■	■	■
	On-site Emergency Road Service Calls	■	■	■	■	■	■	■
	Traffic Accident Services	■	■	■	■	■	■	■
	Hazardous Weather Services	■	■	■	■	■	■	■
	Travel Planning and Discounts	■	■	■	■	■	■	■
	Legal Assistance Services	■	■	■	■	■	■	■
	Stolen Vehicle Services	■	■	■	■	■	■	■
	<b>Rental Vehicle Assistance</b>	■	■	■	■	■	■	■
<b>Tire Road Hazard Coverage*</b>	■	■	■	■	■	■	■	■
<b>Component Coverage</b>								
<b>Engine Mechanical</b>	Anti-Roll Struts/Dampers	■	■	■	■	■	■	■
	Core Plugs	■	■	■	■	■	■	■
	Crankshaft Pulley	■	■	■	■	■	■	■
	Cylinder Block and All Internal Parts	■	■	■	■	■	■	■
	Cylinder Head and All Lubricated Parts	■	■	■	■	■	■	■
	Drive Plate	■	■	■	■	■	■	■
	Engine Mounts	■	■	■	■	■	■	■
	Fan Motor	■	■	■	■	■	■	■
	Fans and Clutch	■	■	■	■	■	■	■
	Flywheel Ring Gear	■	■	■	■	■	■	■
	Gauge Oil Level	■	■	■	■	■	■	■
	Harmonic Balancer	■	■	■	■	■	■	■
	Manifolds	■	■	■	■	■	■	■
	Oil Pump	■	■	■	■	■	■	■
	Radiator	■	■	■	■	■	■	■
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■
	Timing Belt Tensioner	■	■	■	■	■	■	■
	Timing Chain Cover	■	■	■	■	■	■	■
	Timing Gears/Belt/Chain Other Than Maintenance	■	■	■	■	■	■	■
	Turbocharger/Supercharger	■	■	■	■	■	■	■
Turbocharger Valves	■	■	■	■	■	■	■	
Valve/Rocker Covers	■	■	■	■	■	■	■	
Water Pump	■	■	■	■	■	■	■	
<b>Engine Management</b>	Actuator - By Pass Valve	■	■	■	■	■	■	■
	Air Induction System	■	■	■	■	■	■	■
	EGR Control Solenoid Valve	■	■	■	■	■	■	■
	EGR Rate and Feedback Control	■	■	■	■	■	■	■
	EGR Valve	■	■	■	■	■	■	■
	Electronic Ignition	■	■	■	■	■	■	■
	EVAP Canister	■	■	■	■	■	■	■
	EVAP Canister Purge Control Valve	■	■	■	■	■	■	■
	Idle Air Control Valve	■	■	■	■	■	■	■
	Ignition Coil	■	■	■	■	■	■	■
	Injectors	■	■	■	■	■	■	■
	Throttle Body	■	■	■	■	■	■	■
Vacuum and Temperature Sensitive Valves Used in Above Mentioned Components	■	■	■	■	■	■	■	
<b>Fuel System and Control</b>	Accelerator Pedal, Spring and Bracket	■	■	■	■	■	■	■
	Accelerator Cable and Bracket	■	■	■	■	■	■	■
	Automatic Shut Off / Rollover Valve	■	■	■	■	■	■	■
	Fuel Cap	■	■	■	■	■	■	■
	Fuel Pump	■	■	■	■	■	■	■
	Fuel Pump Control Module	■	■	■	■	■	■	■
	Fuel Sensors	■	■	■	■	■	■	■
	Fuel Solenoids	■	■	■	■	■	■	■
	Fuel Tank and Lines	■	■	■	■	■	■	■
	Fuel Tank Sending Units	■	■	■	■	■	■	■
	Pressure Regulator	■	■	■	■	■	■	■
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■
<b>Transmission</b>	Bell Housing	■	■	■	■	■	■	■
	Clutch Interlock Switch	■	■	■	■	■	■	■
	Clutch Master Cylinder	■	■	■	■	■	■	■
	Clutch Pedal and Cable	■	■	■	■	■	■	■
	Inhibitor Switch	■	■	■	■	■	■	■
	Oil Cooler and Lines	■	■	■	■	■	■	■
	Oil Pump	■	■	■	■	■	■	■
	Operating Cylinder (Slave)	■	■	■	■	■	■	■
	Over Drive Control Switch	■	■	■	■	■	■	■
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■
	Shift Lever, Mechanism, Linkage, Cables, Bushing	■	■	■	■	■	■	■
	Shiftlock System	■	■	■	■	■	■	■
	Speedo Cable/Electronic Sensor	■	■	■	■	■	■	■
	Torque Converter	■	■	■	■	■	■	■
Transmission Case and All Internal Parts	■	■	■	■	■	■	■	
Transmission Mounts	■	■	■	■	■	■	■	
<b>Steering</b>	Gear Housing and All Internal Parts	■	■	■	■	■	■	■
	Linkage and Couplings	■	■	■	■	■	■	■
	Power Steering Pump	■	■	■	■	■	■	■
	Rack and Pinion Assembly	■	■	■	■	■	■	■
	Reservoir Tank	■	■	■	■	■	■	■
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■
Steering Columns and Intermediate Shafts	■	■	■	■	■	■	■	
Tie Rod Ends	■	■	■	■	■	■	■	
Tilt Steering Mechanism	■	■	■	■	■	■	■	
<b>Electrical</b>	Actuators for Listed Components	■	■	■	■	■	■	■
	Alternator	■	■	■	■	■	■	■
	Clock	■	■	■	■	■	■	■
	Combination Switch	■	■	■	■	■	■	■
	Electrical Switches	■	■	■	■	■	■	■
	Electronic Instrument Cluster	■	■	■	■	■	■	■
	Flashers - Hazard and Turn Signal	■	■	■	■	■	■	■
	Heated Seat and Switch	■	■	■	■	■	■	■
	Homelink	■	■	■	■	■	■	■
	Horn	■	■	■	■	■	■	■
	Ignition Coil and Modules	■	■	■	■	■	■	■
	Ignition Switch	■	■	■	■	■	■	■

\* Tire Road Hazard Coverage protects factory-installed tires against damage from road hazards for up to 36 months from the In Service Date, or up to 50,000 kilometres, or its useful life, whichever occurs first.

	New Vehicle		Certified Pre-Owned		Pre-owned				
	Platinum	Gold	Platinum	Power Train	Platinum	Comprehensive	Power Train	Major Component	
	<b>Electrical (continued)</b>								
<b>Electrical (continued)</b>	OEM Anti-Theft System	■	■	■	■	■	■	■	
	Power Door Locks	■	■	■	■	■	■	■	
	Power Mirror Motor and Switch	■	■	■	■	■	■	■	
	Power Seat Motor	■	■	■	■	■	■	■	
	Power Trunk Release and Switch	■	■	■	■	■	■	■	
	Power Window Motor	■	■	■	■	■	■	■	
	Rear Wiper Motor and Washer Motor	■	■	■	■	■	■	■	
	Relays for the Covered Components	■	■	■	■	■	■	■	
	Solenoid	■	■	■	■	■	■	■	
	Starter Motor	■	■	■	■	■	■	■	
	Sunroof Motor	■	■	■	■	■	■	■	
	Voltage Regulator	■	■	■	■	■	■	■	
	Warning Buzzers	■	■	■	■	■	■	■	
	Washer Motors	■	■	■	■	■	■	■	
	Window Regulators inc. Motor	■	■	■	■	■	■	■	
	Windshield Wiper Motor	■	■	■	■	■	■	■	
	<b>Brakes</b>	Automatic Adjuster	■	■	■	■	■	■	■
		Brake Pedal	■	■	■	■	■	■	■
Disc Calipers		■	■	■	■	■	■	■	
Hydraulic Valves, Line and Fittings		■	■	■	■	■	■	■	
Master Cylinder		■	■	■	■	■	■	■	
Parking Brake Lever and Release		■	■	■	■	■	■	■	
Proportioning Valve		■	■	■	■	■	■	■	
Reservoir Tank		■	■	■	■	■	■	■	
Seals and Gaskets for Listed Components		■	■	■	■	■	■	■	
Vacuum Assist Boosters		■	■	■	■	■	■	■	
Wheel Cylinders		■	■	■	■	■	■	■	
<b>Axle/Suspension/Front Wheel Drive</b>		Anchor Arm	■	■	■	■	■	■	■
	Axle Shafts (Excluding Boots)	■	■	■	■	■	■	■	
	Constant Velocity Joints (Except CV Boots)	■	■	■	■	■	■	■	
	Control Arm Shafts and Bushings	■	■	■	■	■	■	■	
	Final Drive Housing and Internal Parts	■	■	■	■	■	■	■	
	Front Axle Cross Member	■	■	■	■	■	■	■	
	Front Coil Spring	■	■	■	■	■	■	■	
	Front Wheel Bearings and Seals	■	■	■	■	■	■	■	
	Linkage and Bushings	■	■	■	■	■	■	■	
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■	
	Stabilizer Shaft	■	■	■	■	■	■	■	
	Strut Mounting Plates, Bushings and Bearings	■	■	■	■	■	■	■	
	Tension Rod	■	■	■	■	■	■	■	
	Torque Arm	■	■	■	■	■	■	■	
	Upper and Lower Ball Joints	■	■	■	■	■	■	■	
	Upper and Lower Control Arms	■	■	■	■	■	■	■	
Wheel Bearings and Seals	■	■	■	■	■	■	■		
<b>Axle/Suspension/Rear Wheel Drive and Four Wheel Drive</b>	Axle Bearings and Retainers	■	■	■	■	■	■	■	
	Cross Member	■	■	■	■	■	■	■	
	CV Joints (Except CV Joint Boots)	■	■	■	■	■	■	■	
	Differential Case and All Internal Parts	■	■	■	■	■	■	■	
	Drive Shafts (Front and Rear)	■	■	■	■	■	■	■	
	Lateral Link	■	■	■	■	■	■	■	
	Leaf Spring	■	■	■	■	■	■	■	
	Locking Hubs	■	■	■	■	■	■	■	
	Lower Control Arm and Bushings	■	■	■	■	■	■	■	
	Multi-Link Components	■	■	■	■	■	■	■	
	Propeller Shaft	■	■	■	■	■	■	■	
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■	
	Suspension Arm Axle	■	■	■	■	■	■	■	
	Torsion Bars	■	■	■	■	■	■	■	
Transfer Case and All Internal Parts	■	■	■	■	■	■	■		
Universal Joints	■	■	■	■	■	■	■		
Viscous Coupling	■	■	■	■	■	■	■		
<b>Nissan A/C</b>	Accumulator	■	■	■	■	■	■	■	
	Actuators	■	■	■	■	■	■	■	
	Blower Motor	■	■	■	■	■	■	■	
	Clutch and Pulley	■	■	■	■	■	■	■	
	Compressor	■	■	■	■	■	■	■	
	Condenser	■	■	■	■	■	■	■	
	Condenser Fan and Motor	■	■	■	■	■	■	■	
	Evaporator	■	■	■	■	■	■	■	
	Expansion Valve	■	■	■	■	■	■	■	
	Heater Control and Cables	■	■	■	■	■	■	■	
	Heater Unit and Heater Core	■	■	■	■	■	■	■	
	High and Low Pressure Hoses	■	■	■	■	■	■	■	
	High and Low Rear A/C Tube Assemblies	■	■	■	■	■	■	■	
	Seals and Gaskets for Listed Components	■	■	■	■	■	■	■	
Sensors	■	■	■	■	■	■	■		
Temperature Control Programmer	■	■	■	■	■	■	■		
<b>Body/Window/Interior Mechanism</b>	Glass Lift Channel, Retainer, Slide, Stabilizer and Track Guide	■	■</						